

CZ


Průvodce pro pokročilé nastavení

EN


Advanced Programming Guide

HI CLASS 30


Electronic Control

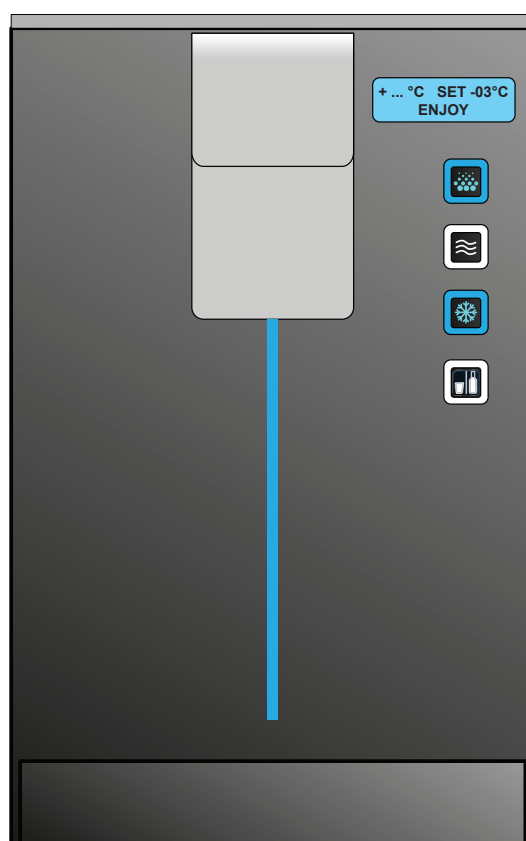

ELEKTRONICKÉ ŘÍZENÍ „ACWG“

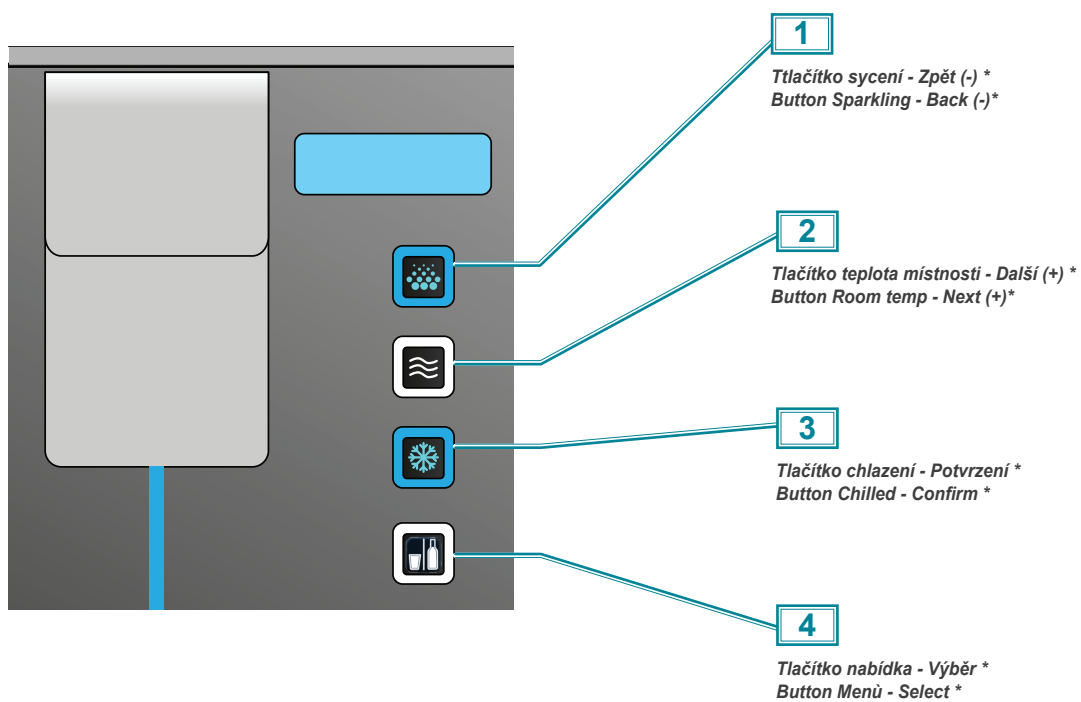


OBRAZOVKA PŘI SPUŠTĚNÍ (ZOBRAZÍ SE PŘI ZAPNUTÍ CHLADIČE VODY) STARTUP SCREEN (APPEARS WHEN THE WATER COOLER IS SWITCHED ON)

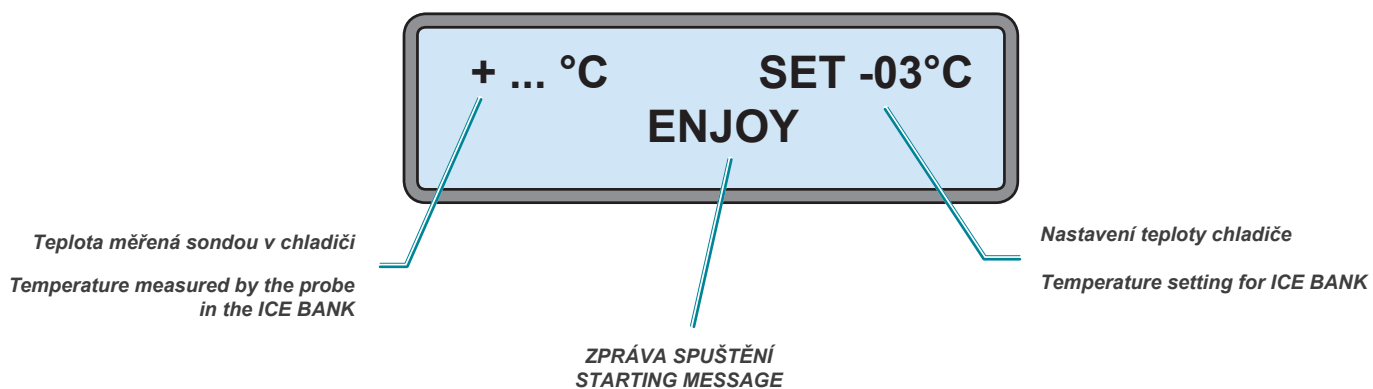




CZ 1 POKROČILÉ NASTAVENÍ

 Tato část je vyhrazena pouze pro kvalifikované operátory


Jak otevřít nabídku Pokročilé nastavení

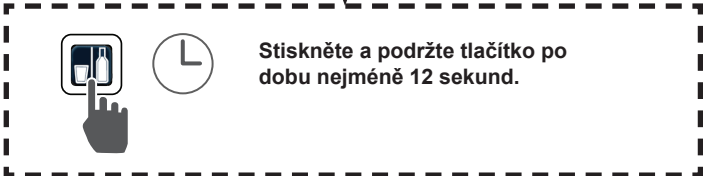



Jak se vrátit na úvodní obrazovku

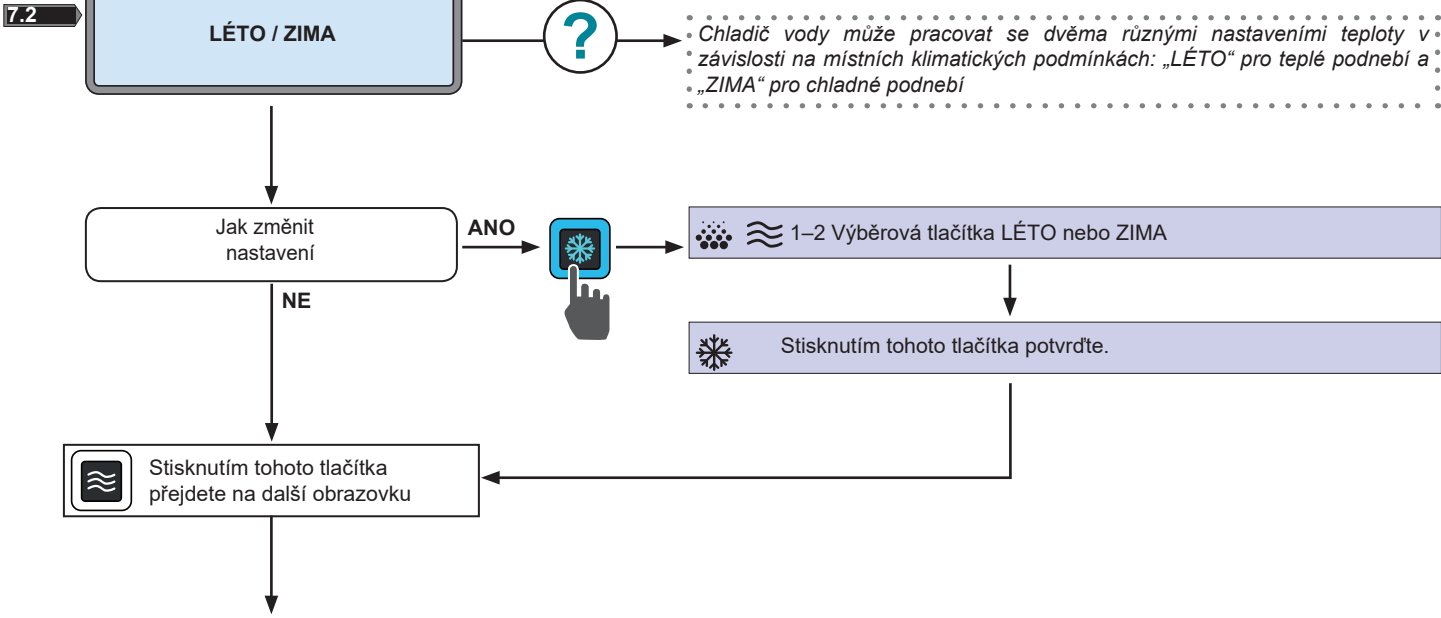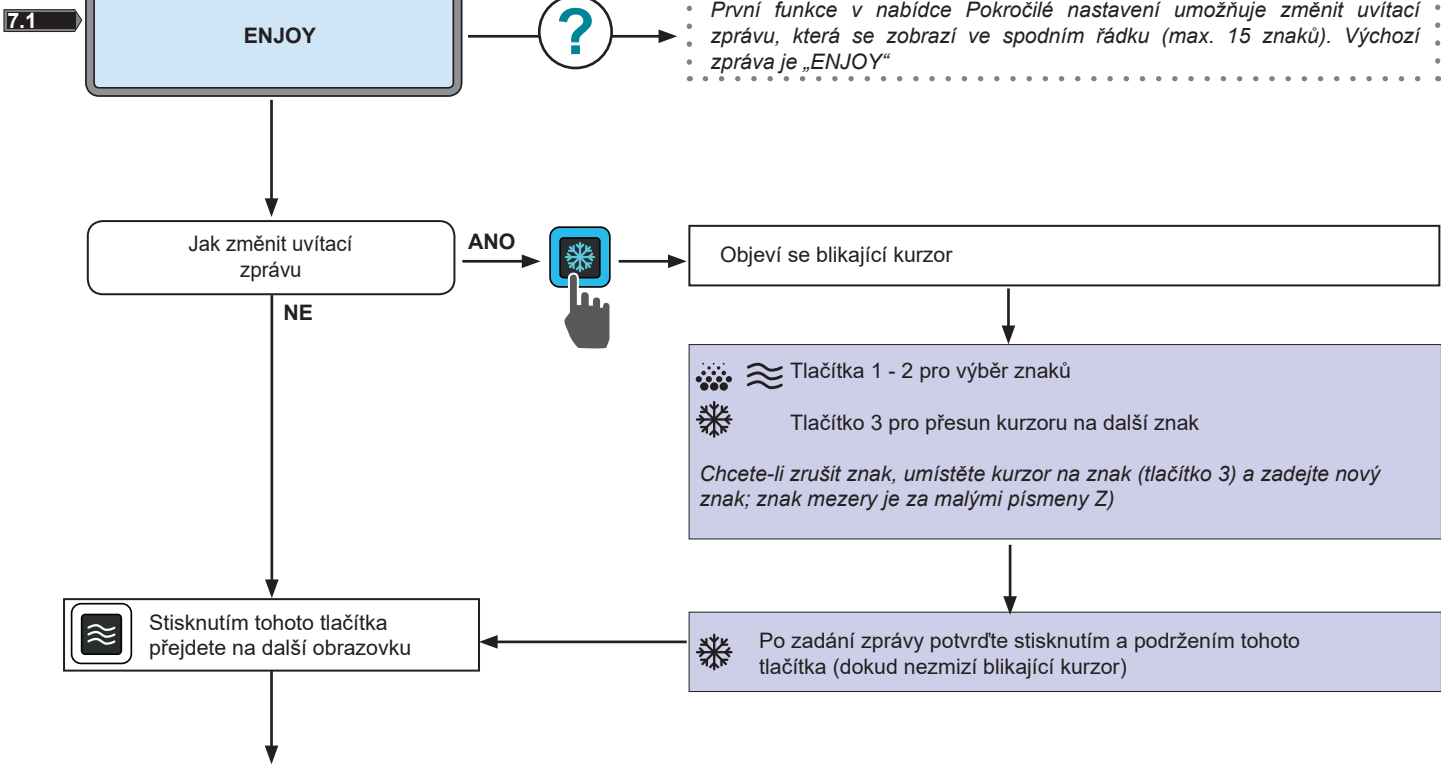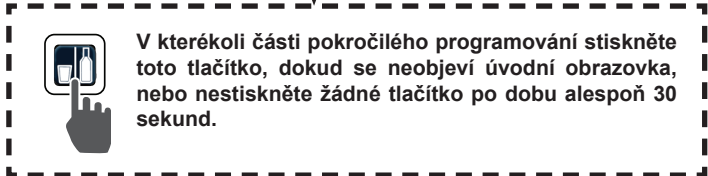



CZ 1 POKROČILÉ NASTAVENÍ

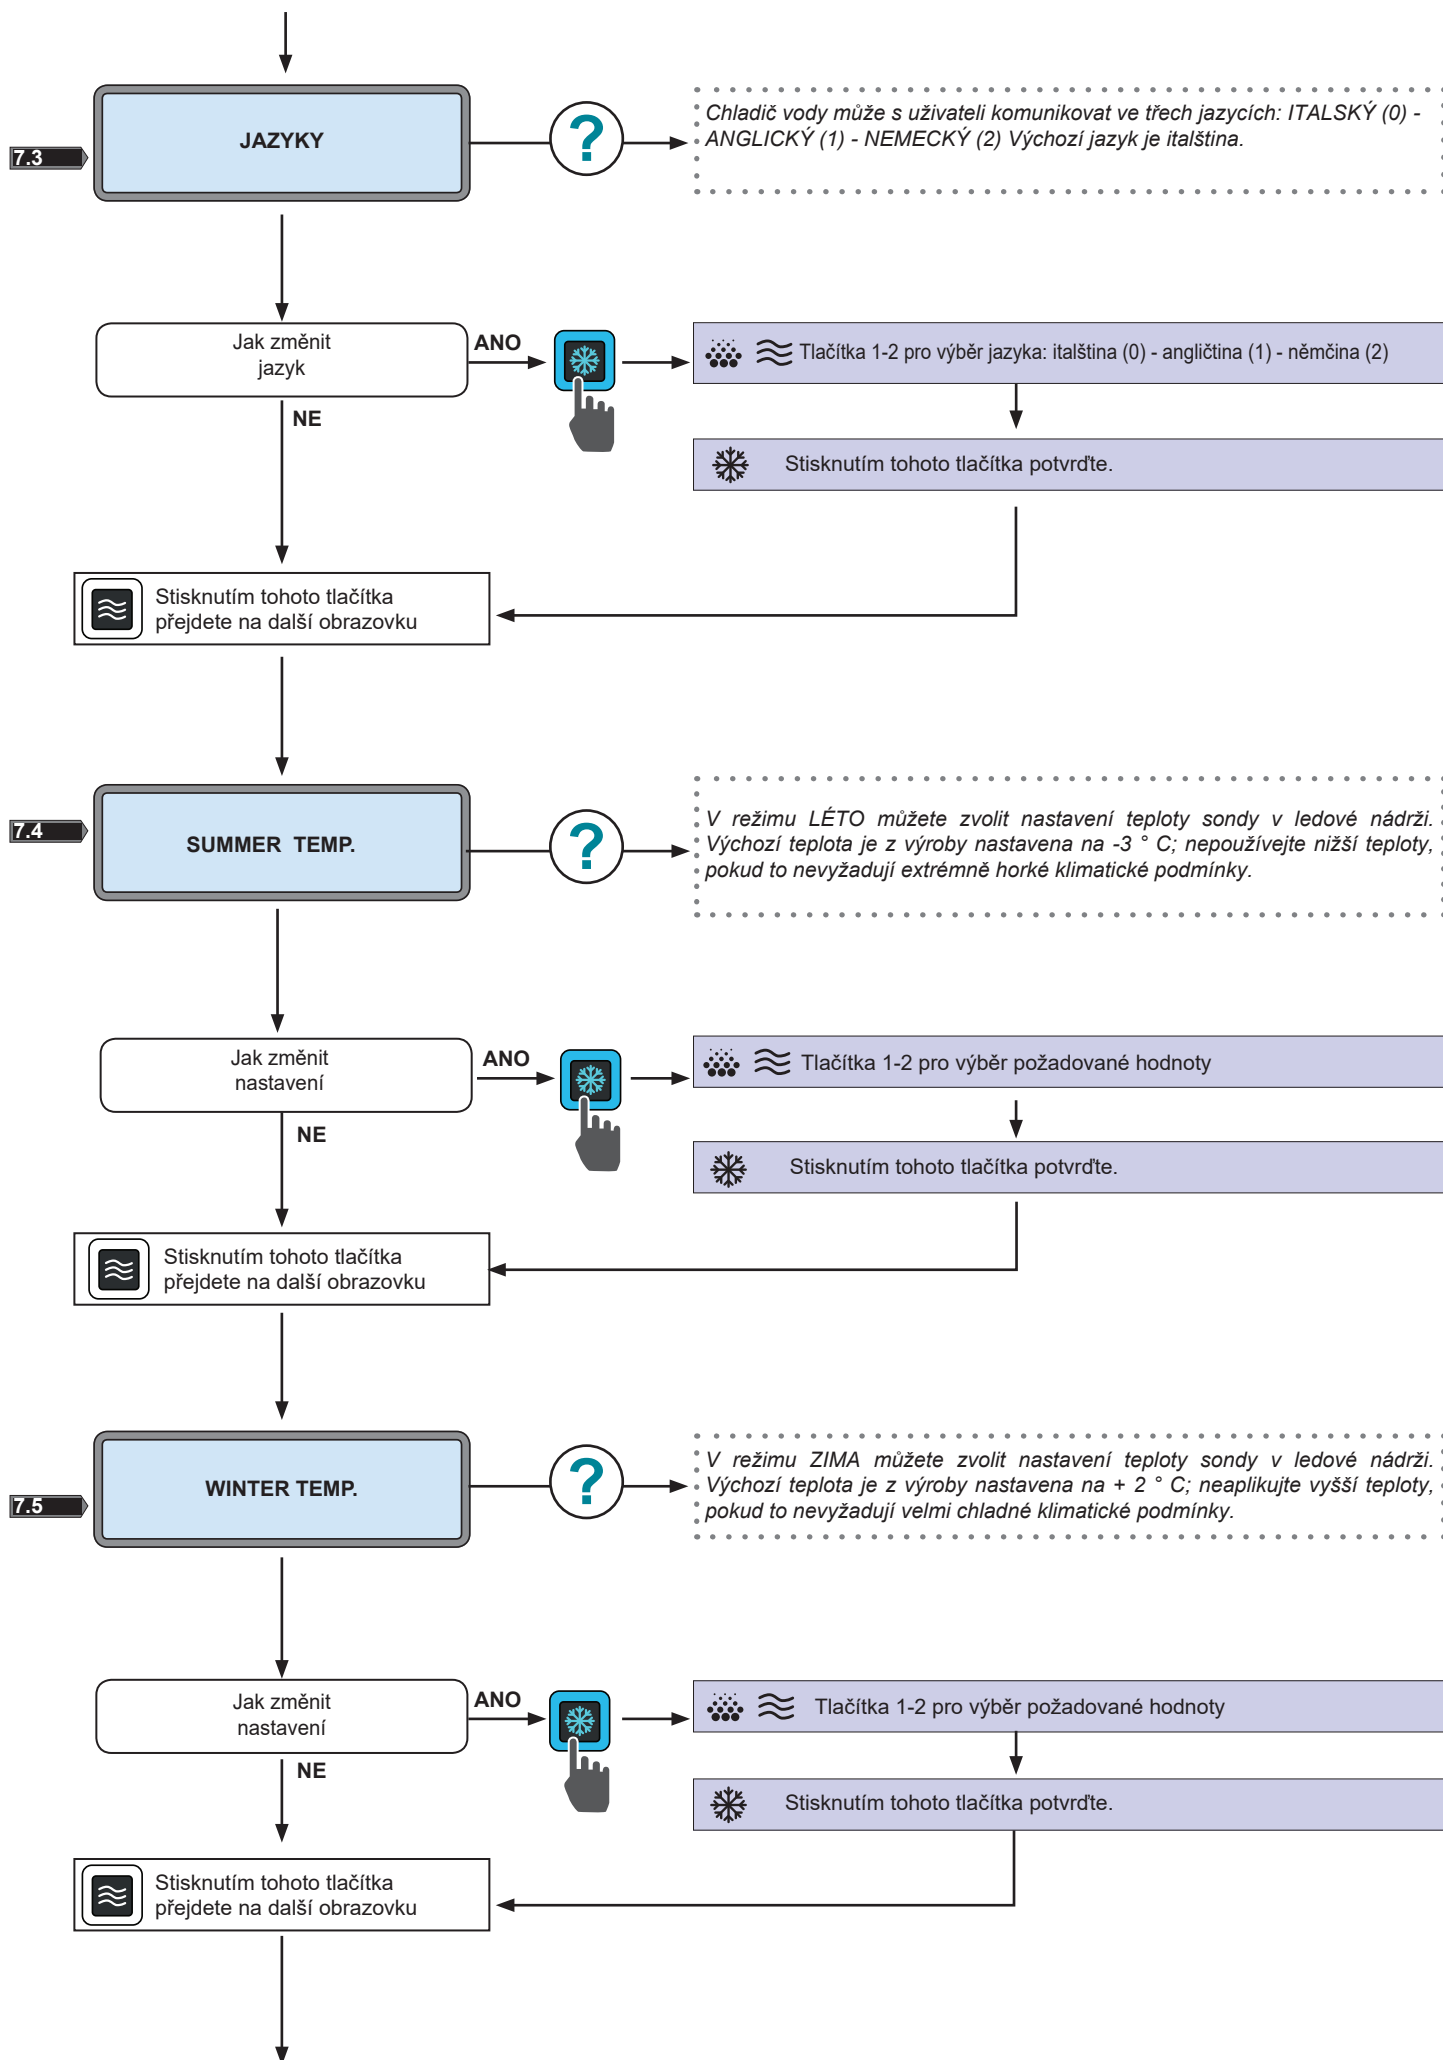


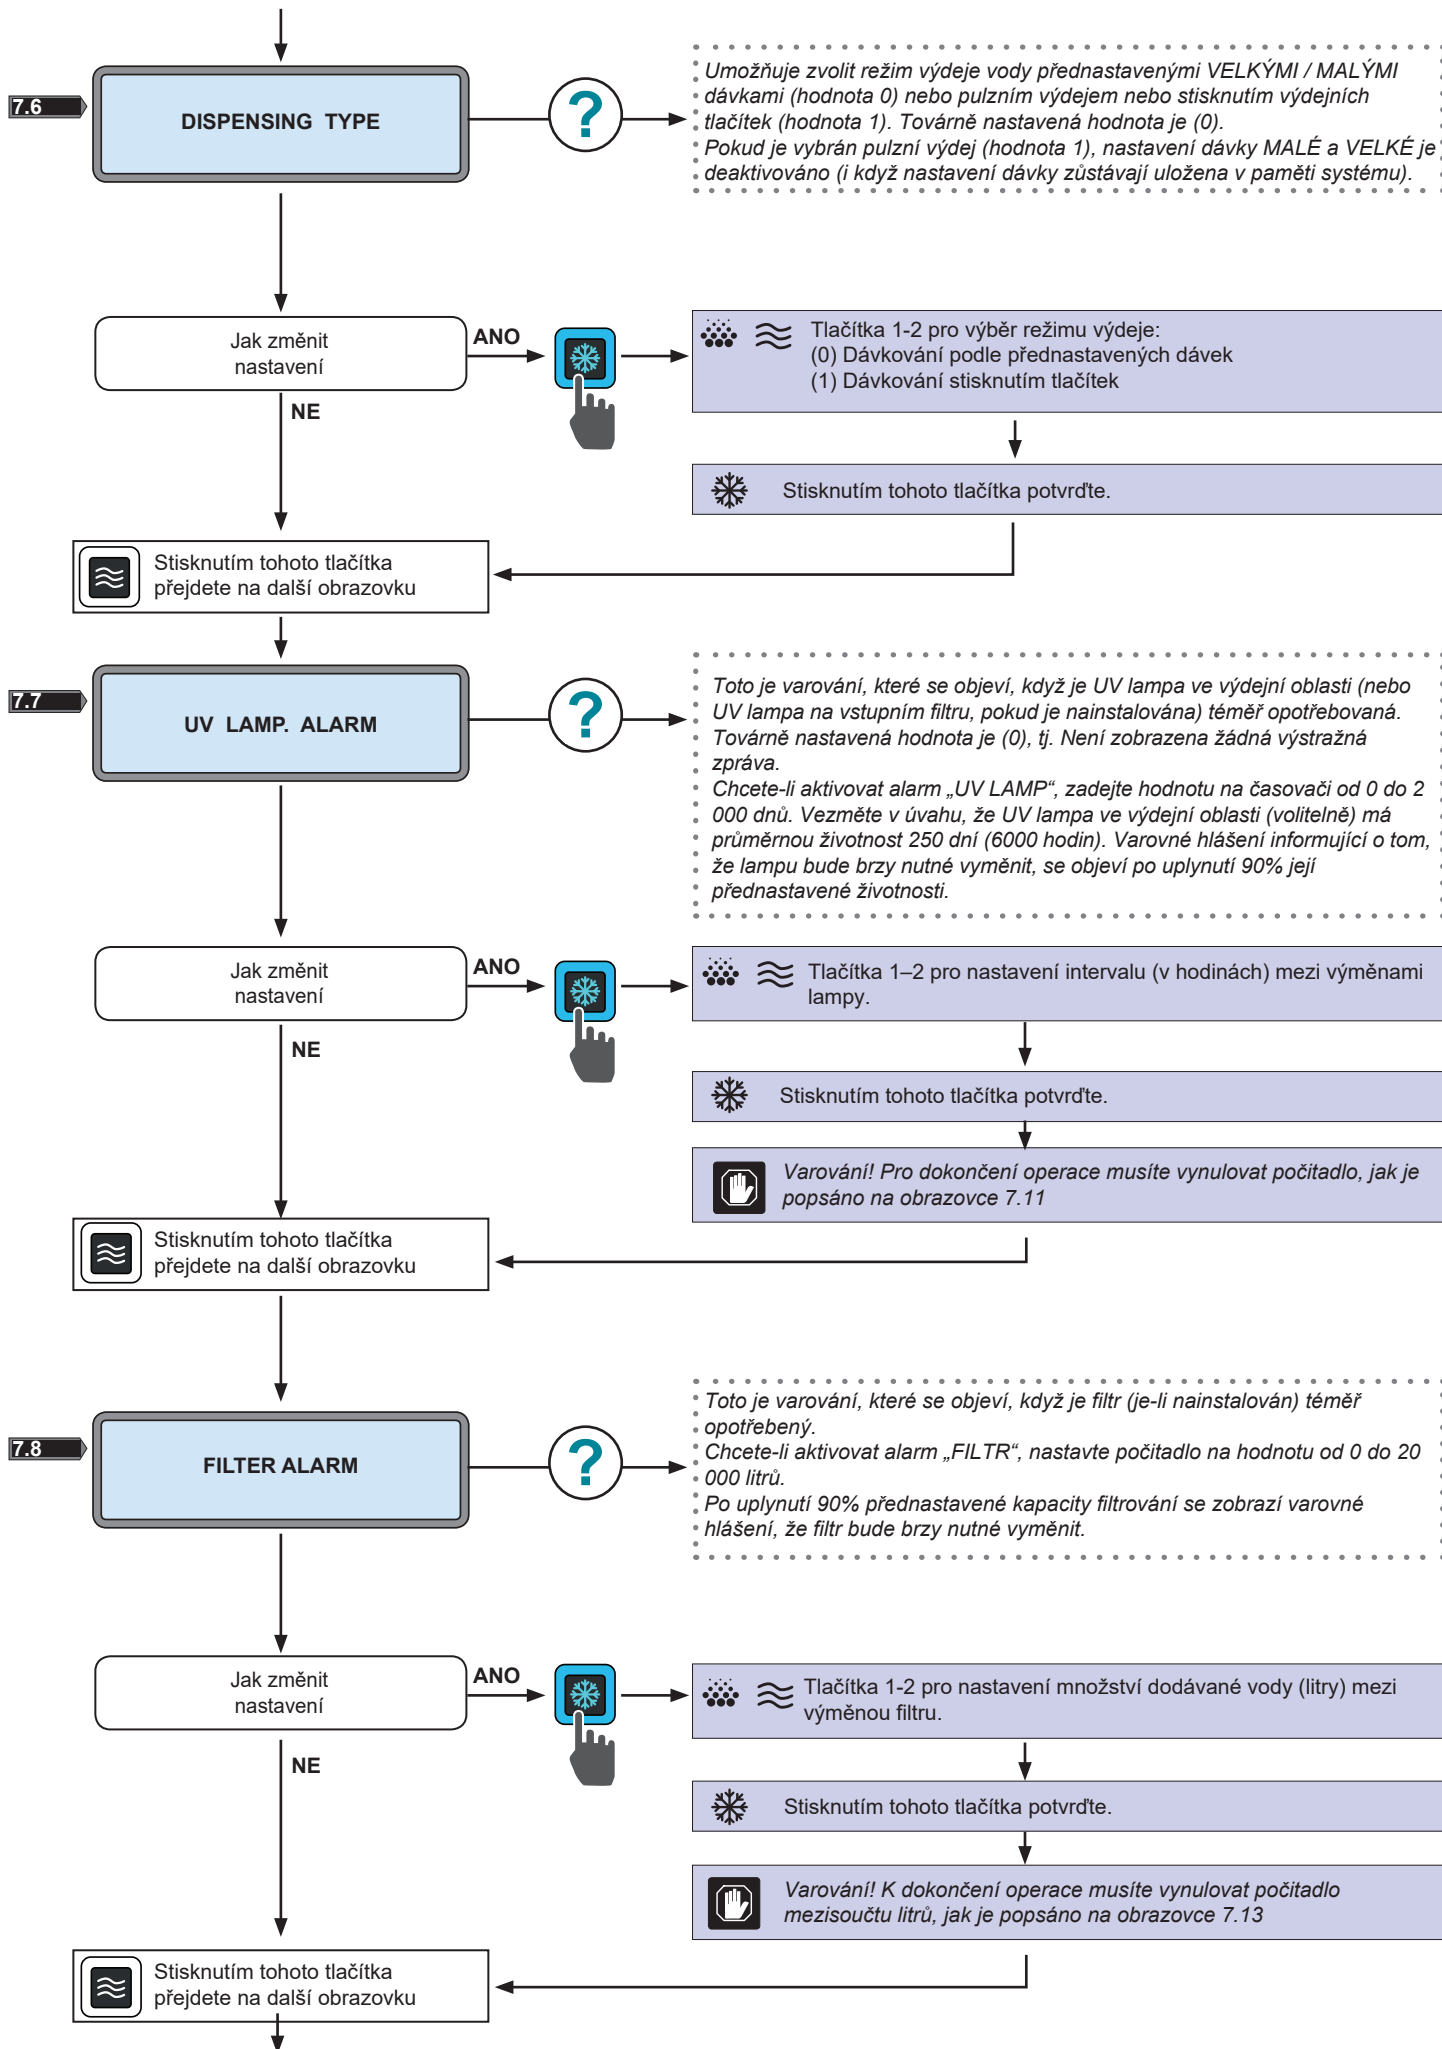


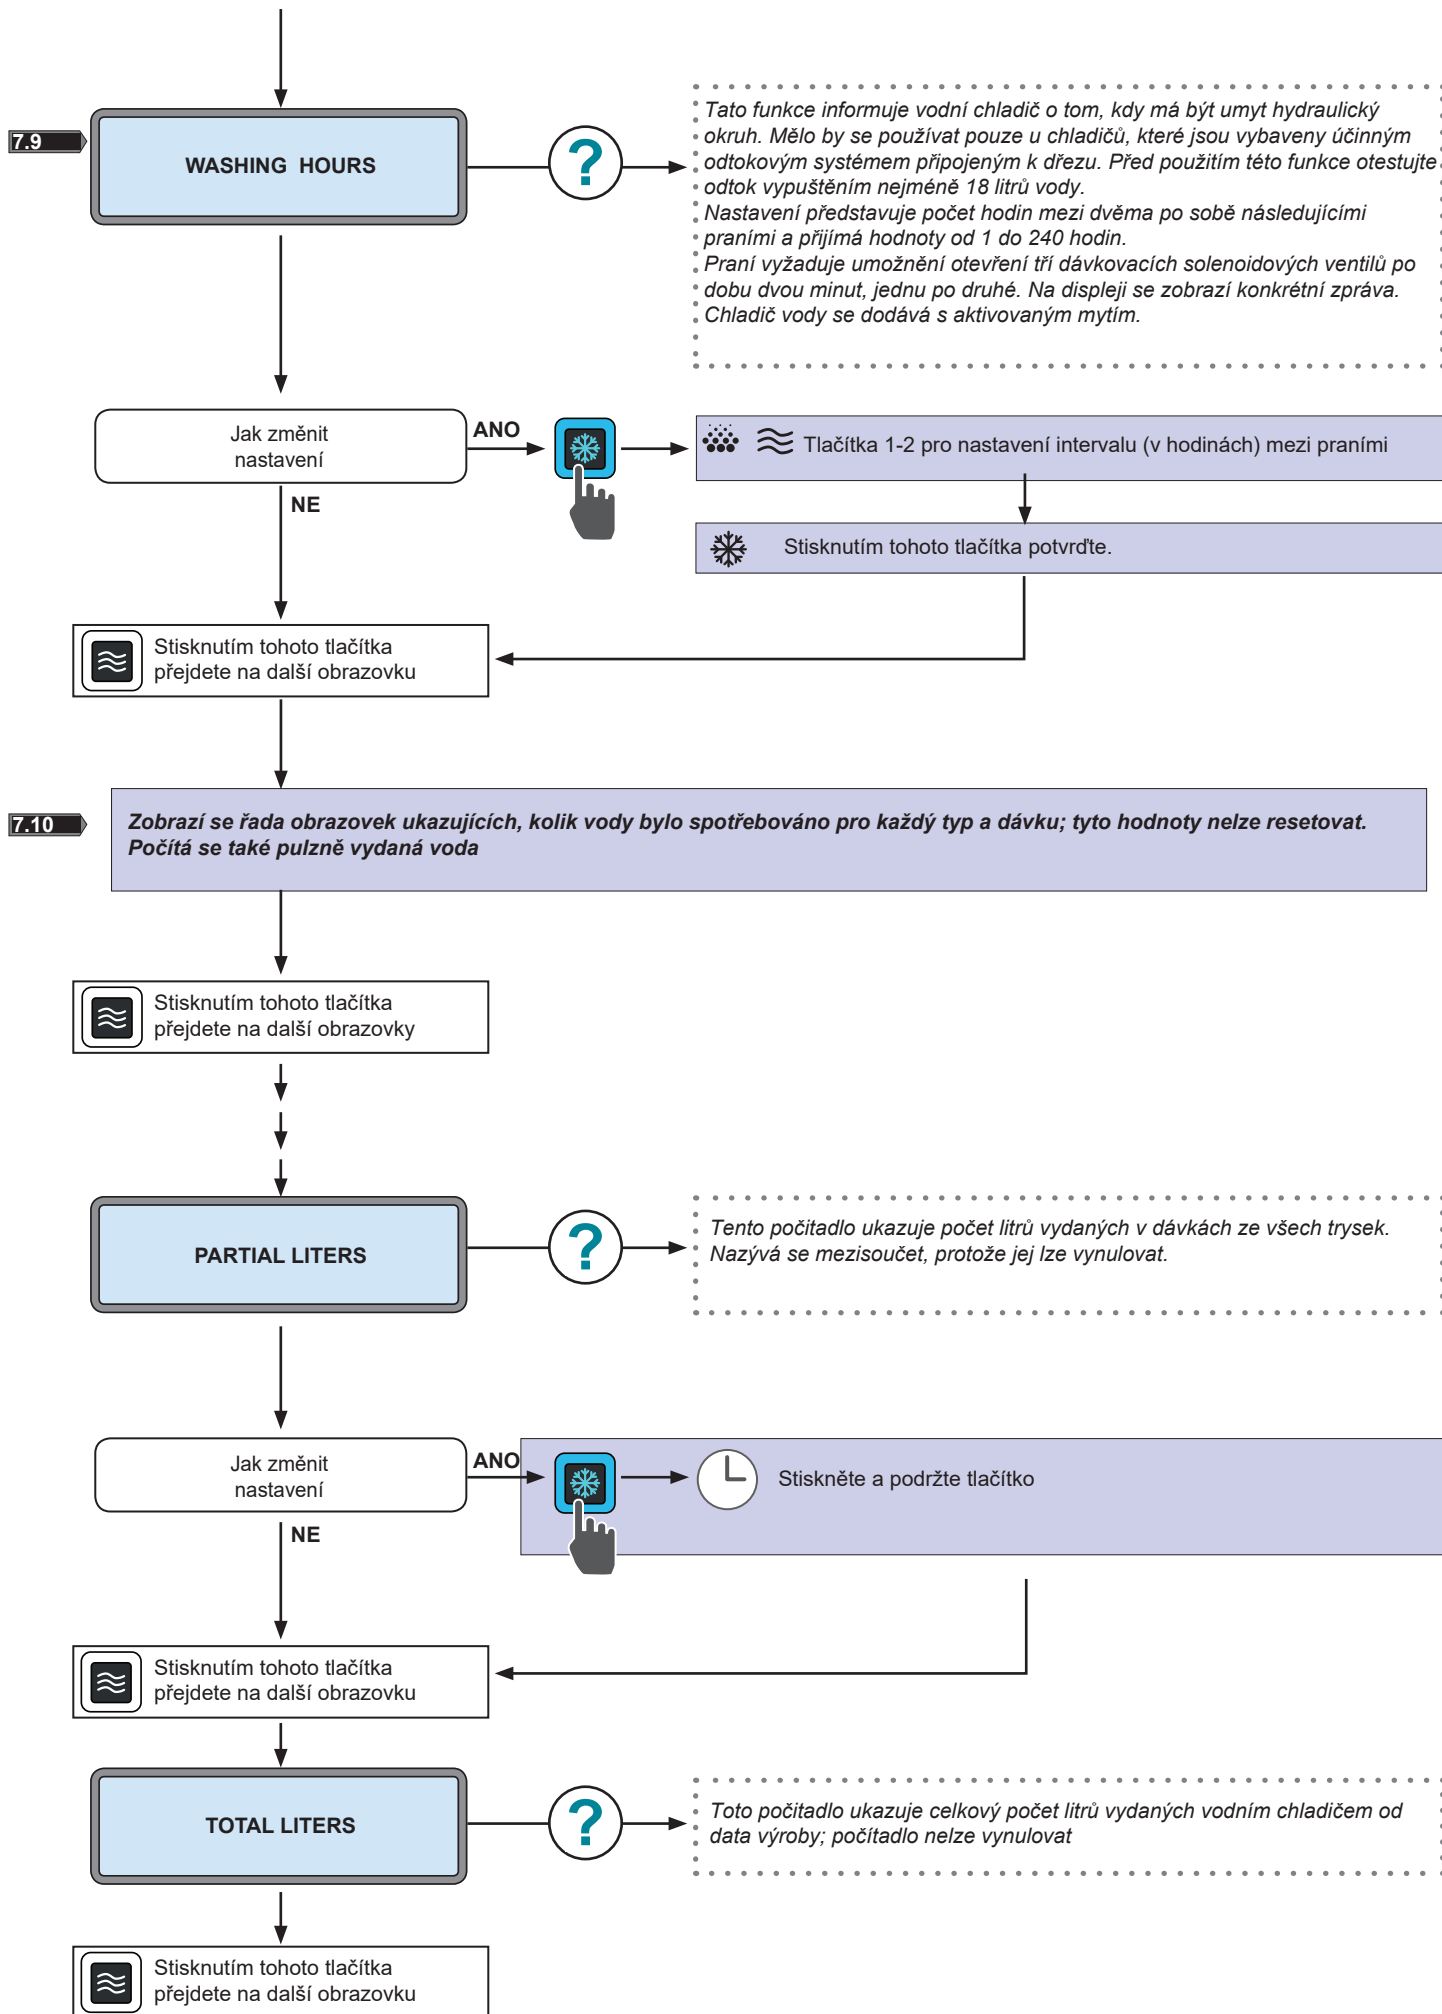

EN 1 POKROČILÉ NASTAVENÍ

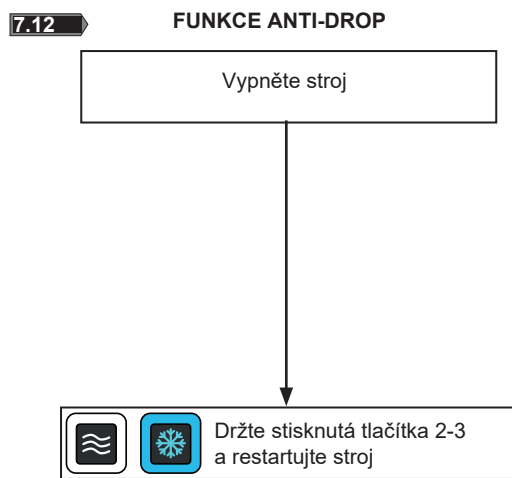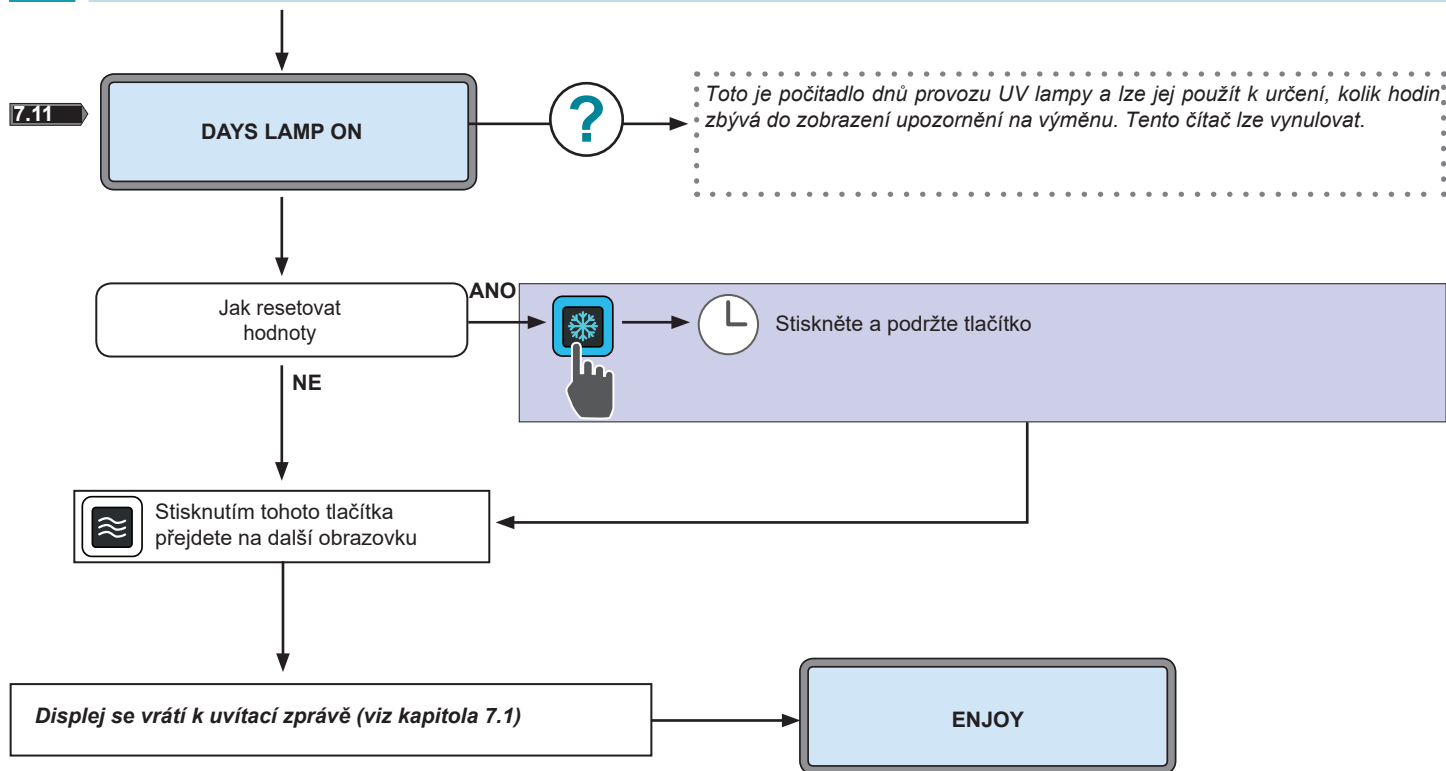

Varování! Funkce anti-drop není ve výchozím nastavení nastavena. Chcete-li jej aktivovat, postupujte podle následujících kroků:

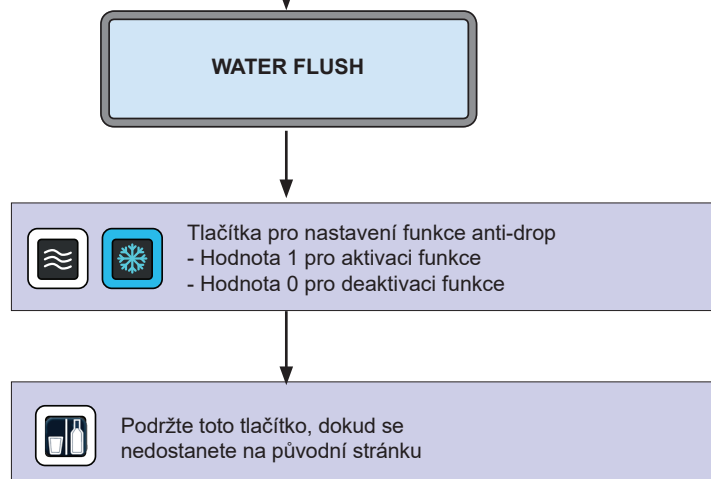
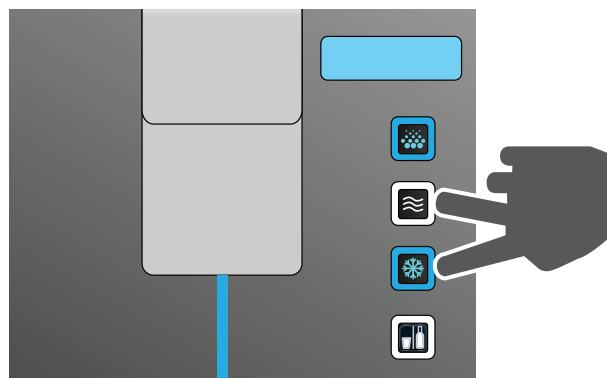



EN 1 ADVANCED PROGRAMMING


 This section is reserved for qualified operators only


How to open the Advanced Programming menu


How to return to the startup screen

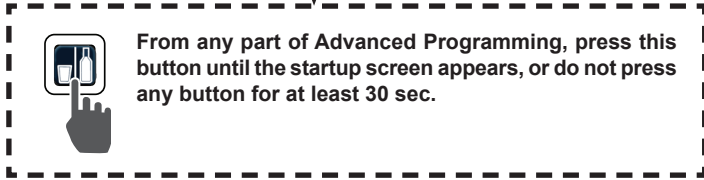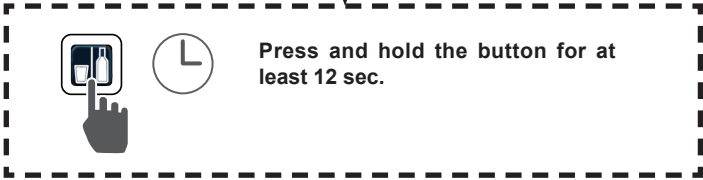


7.1 **ENJOY**  The first function in the Advanced Programming menu lets you change the welcome message that appears on the bottom line (max. 15 characters). The default message is "ENJOY"

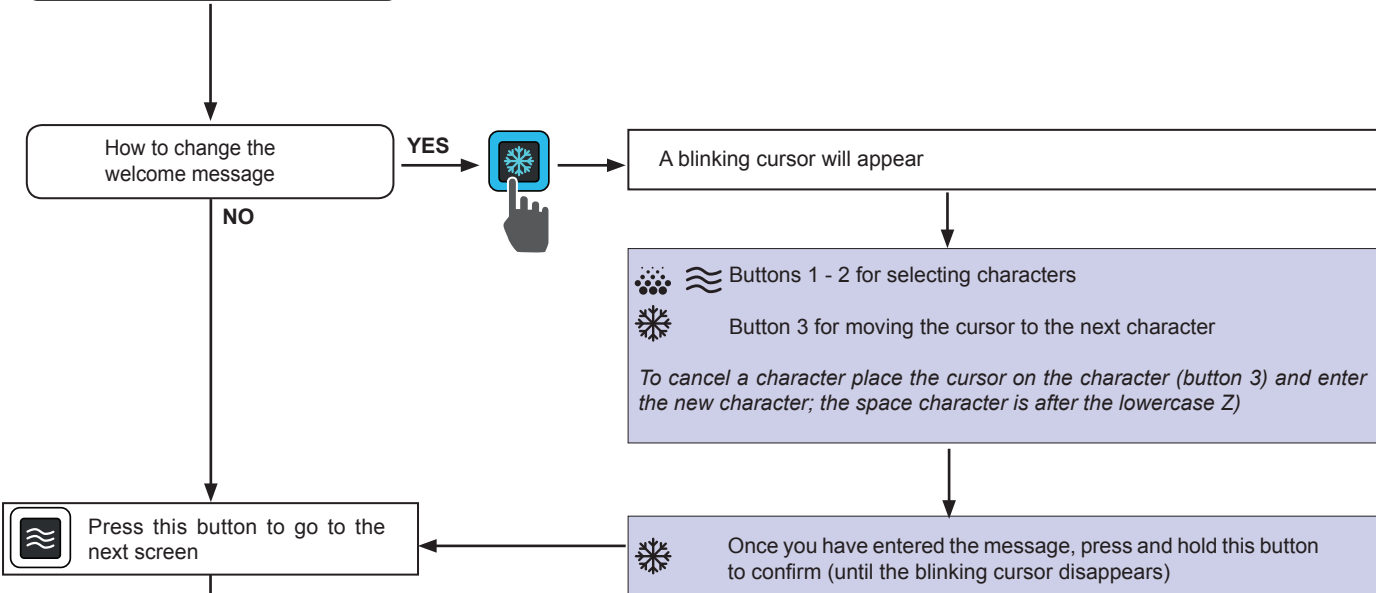



7.2 **SUMMER/WINTER**  The water cooler can work with two different temperature settings, depending on the local climate conditions: "SUMMER" for warm climates, and "WINTER" for cold climates

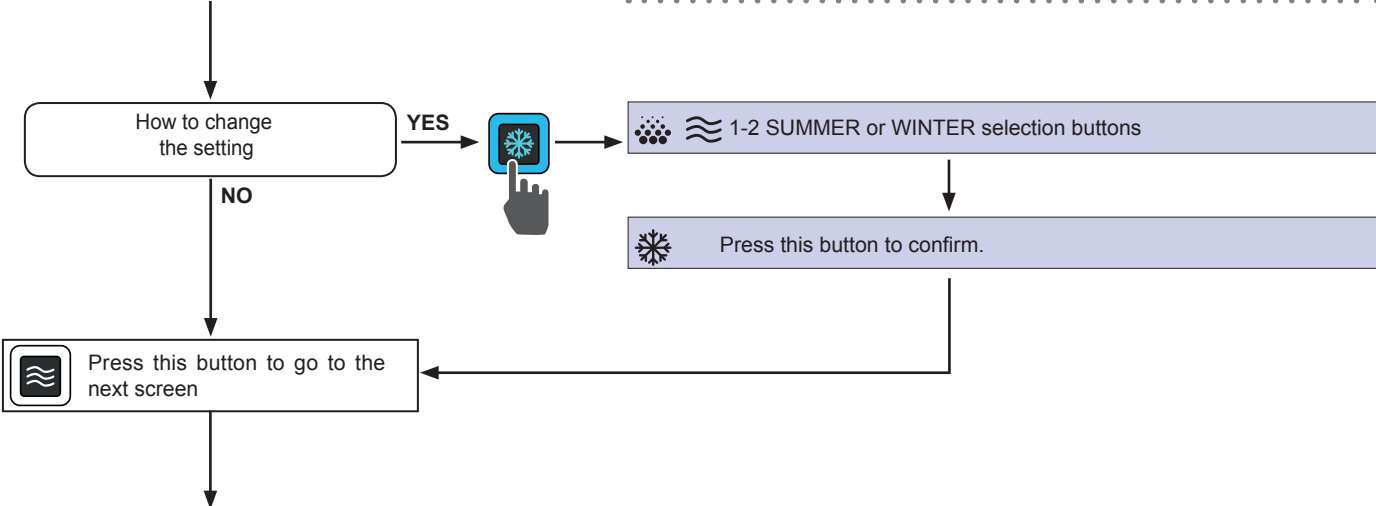



EN 1 ADVANCED PROGRAMMING

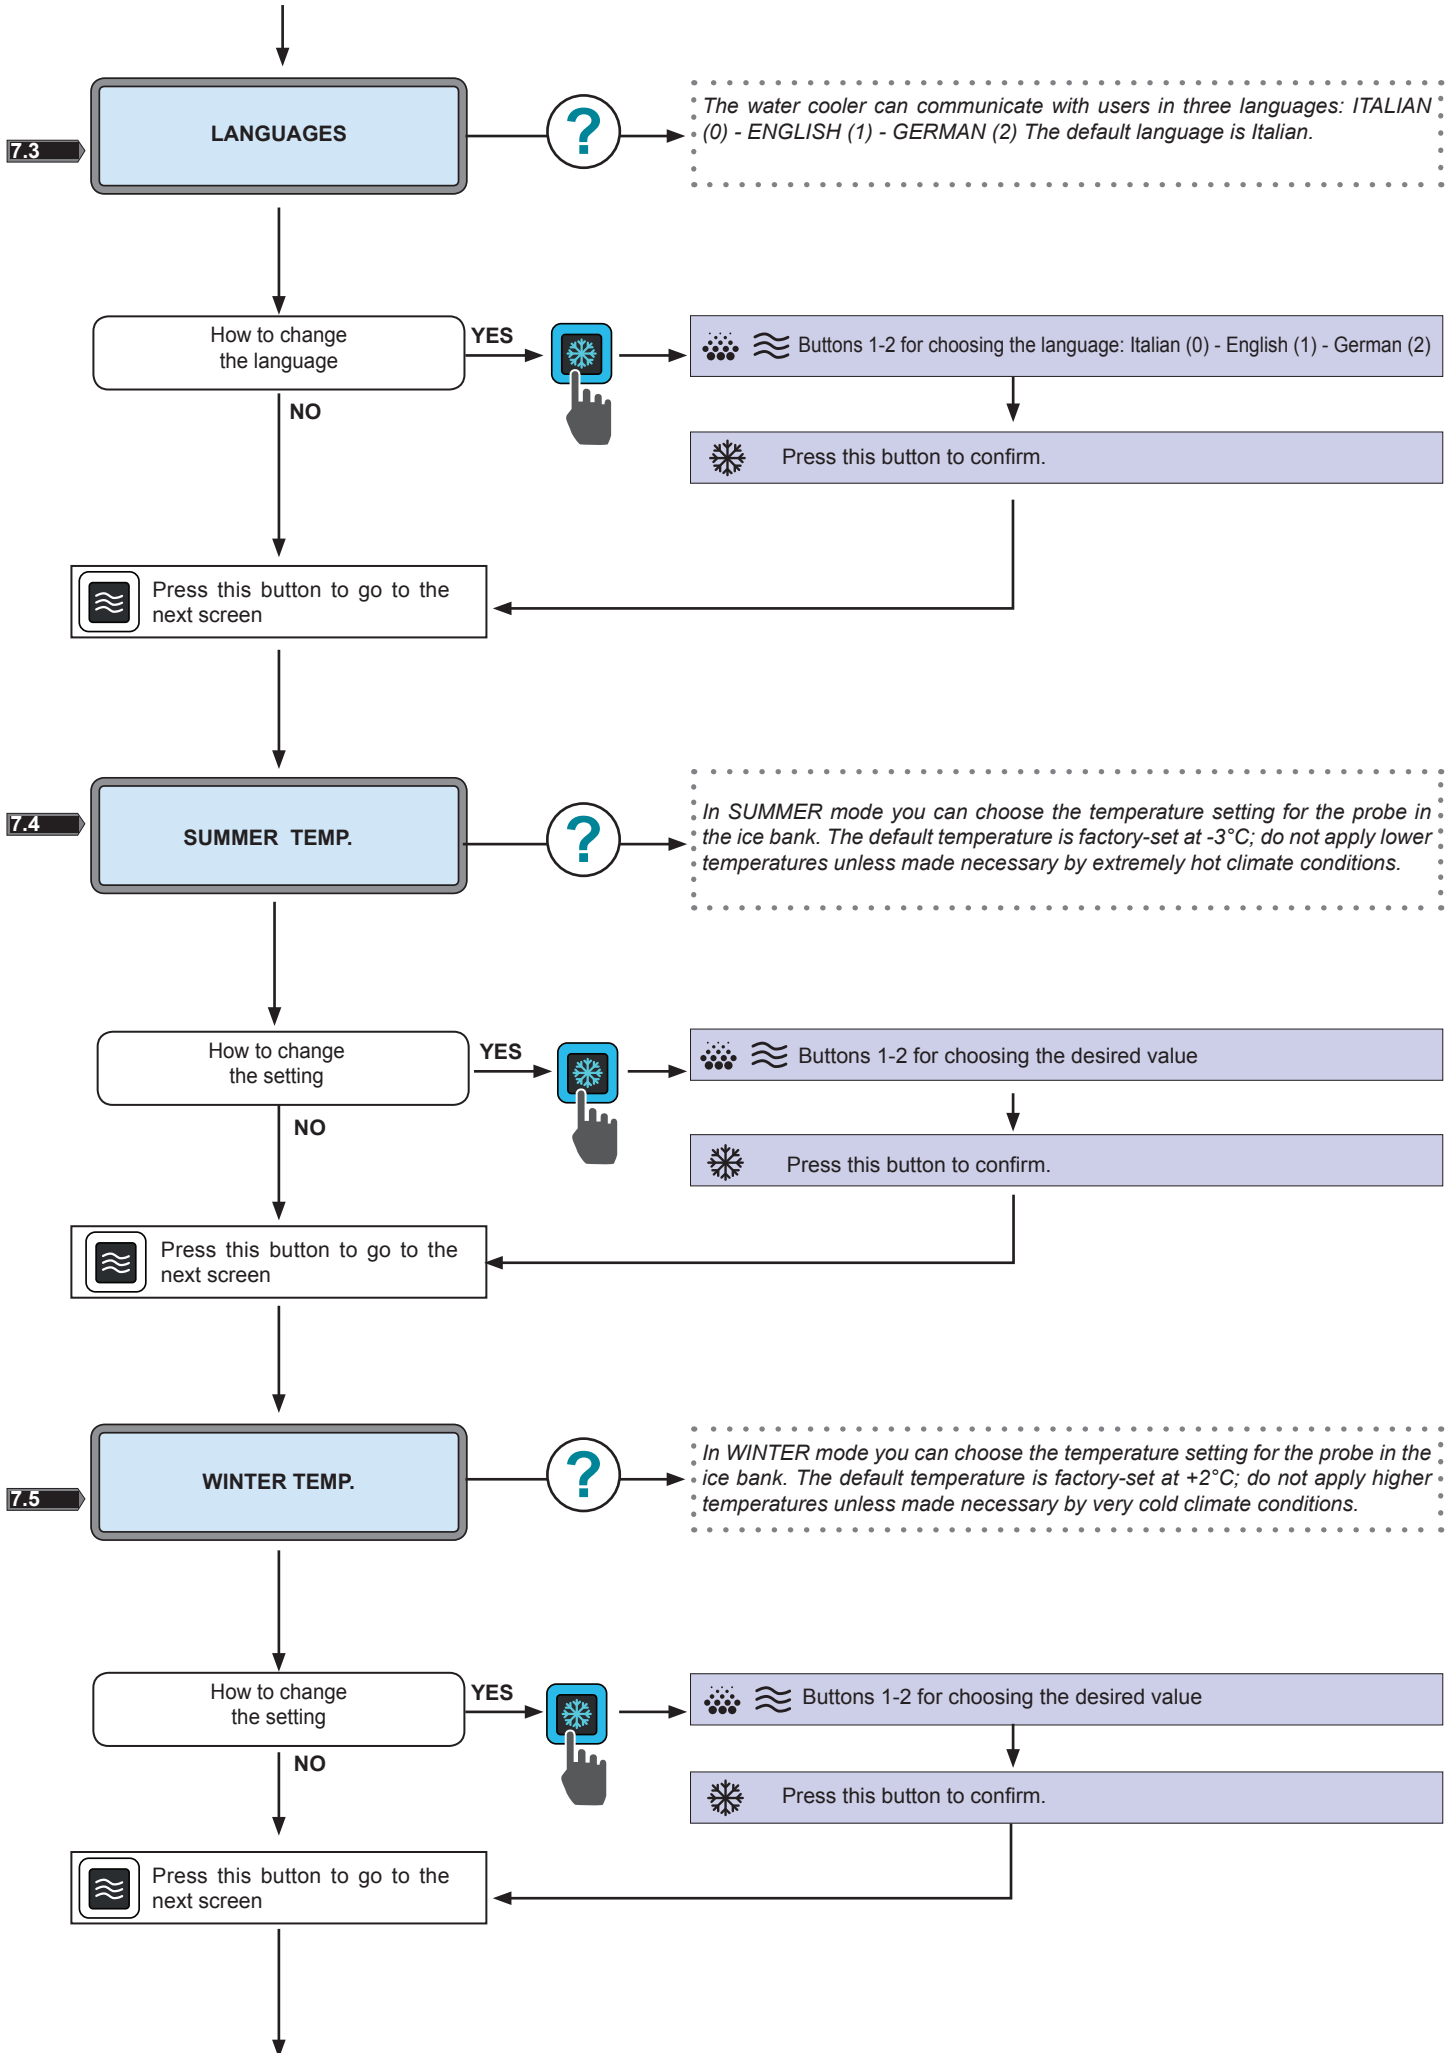

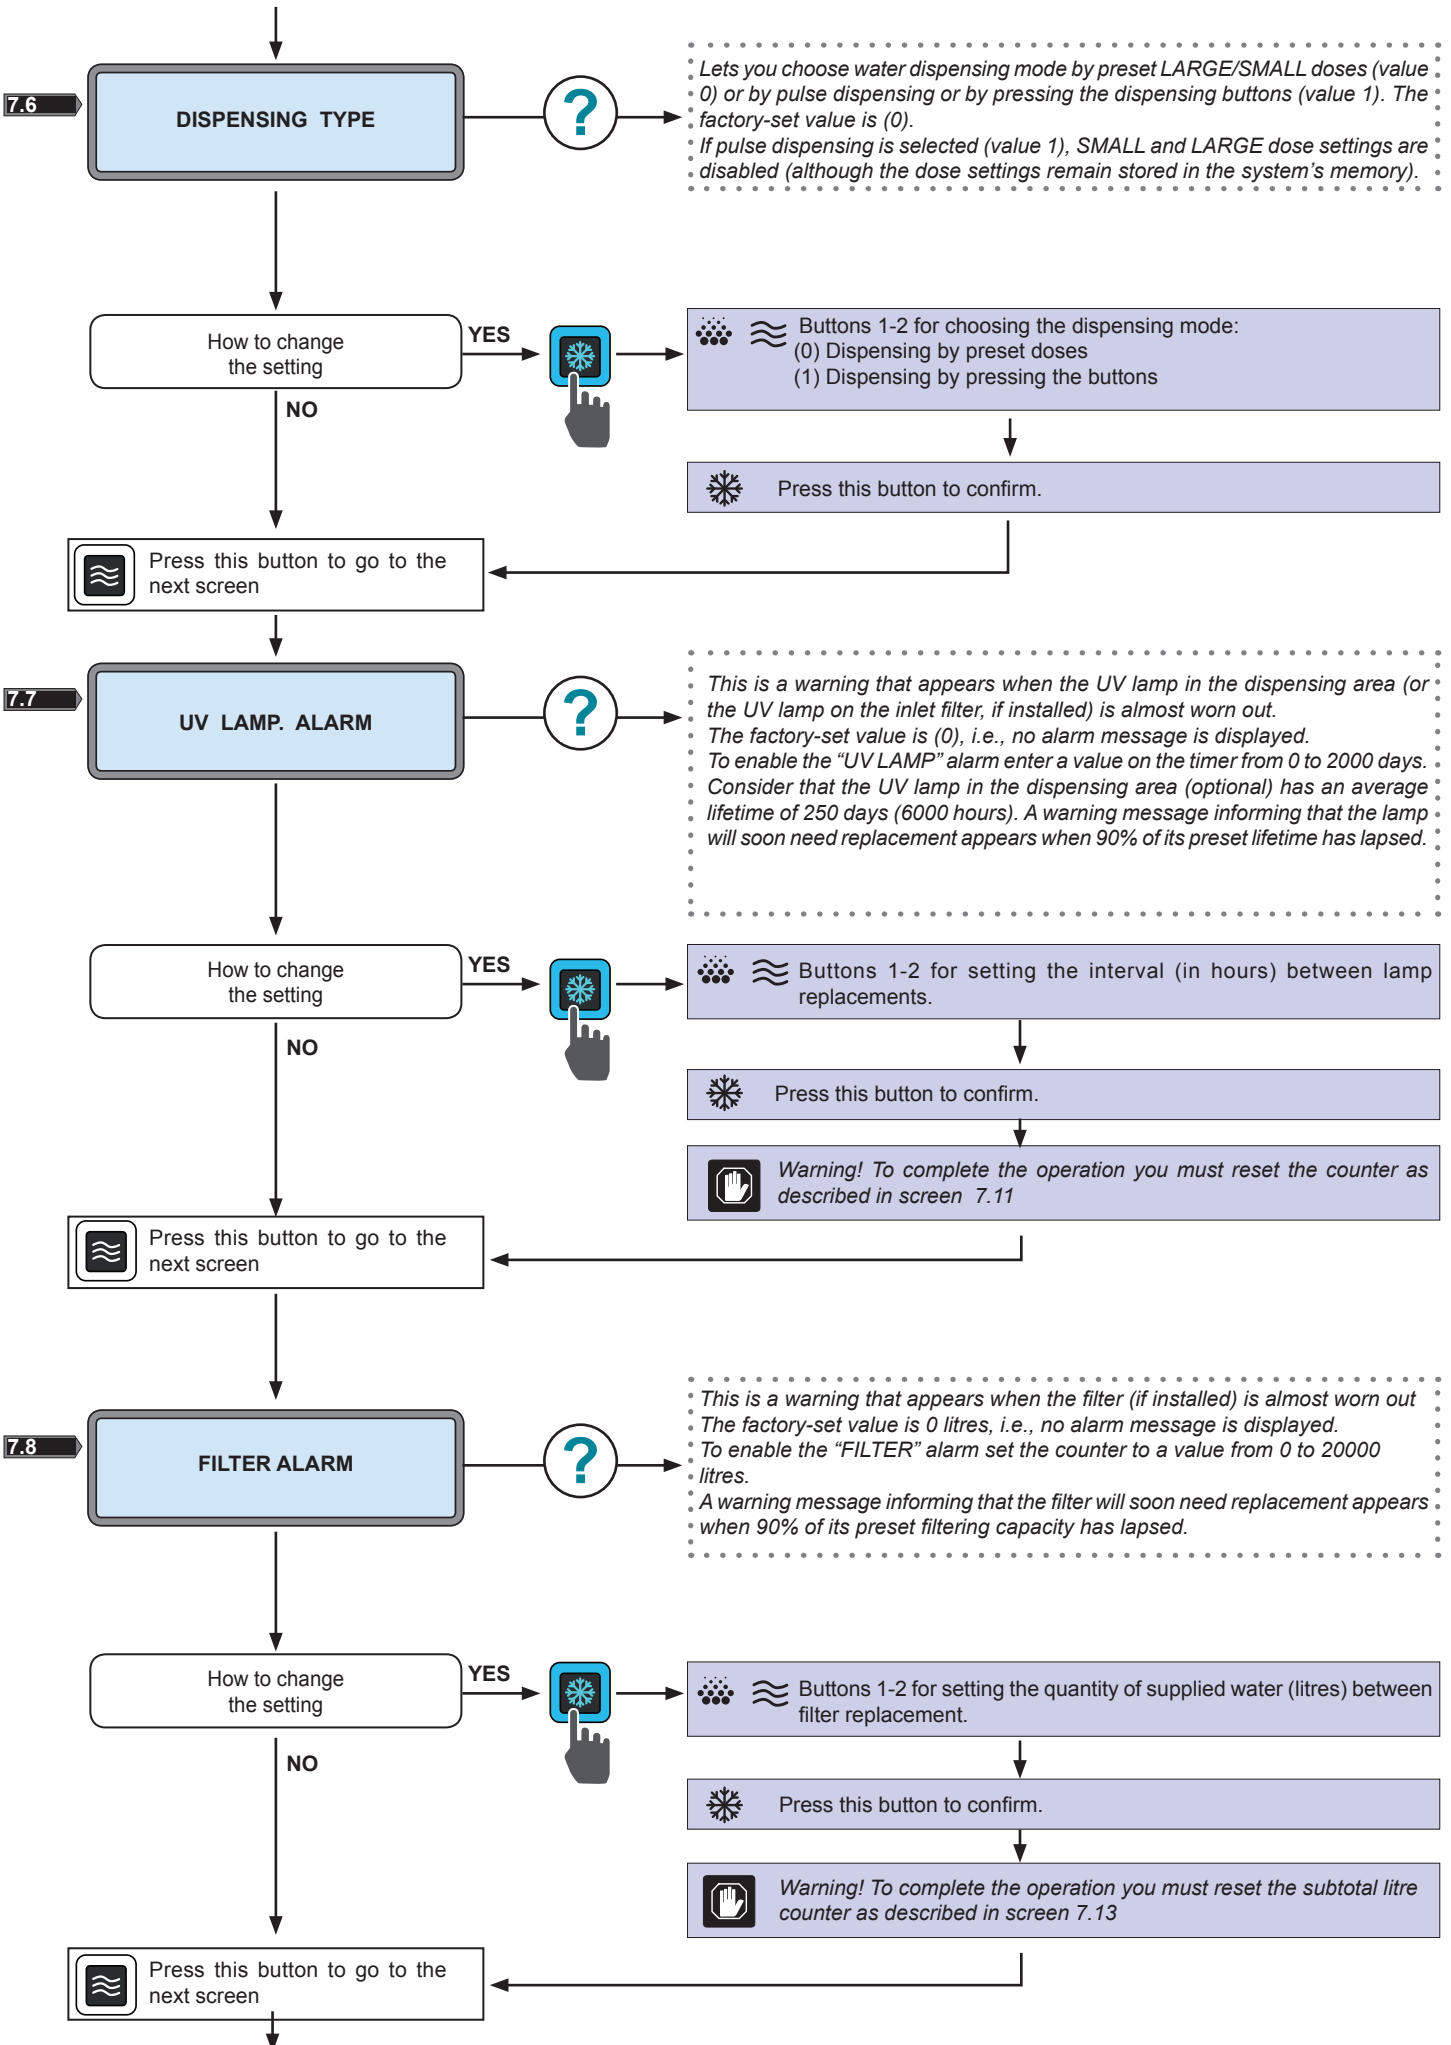

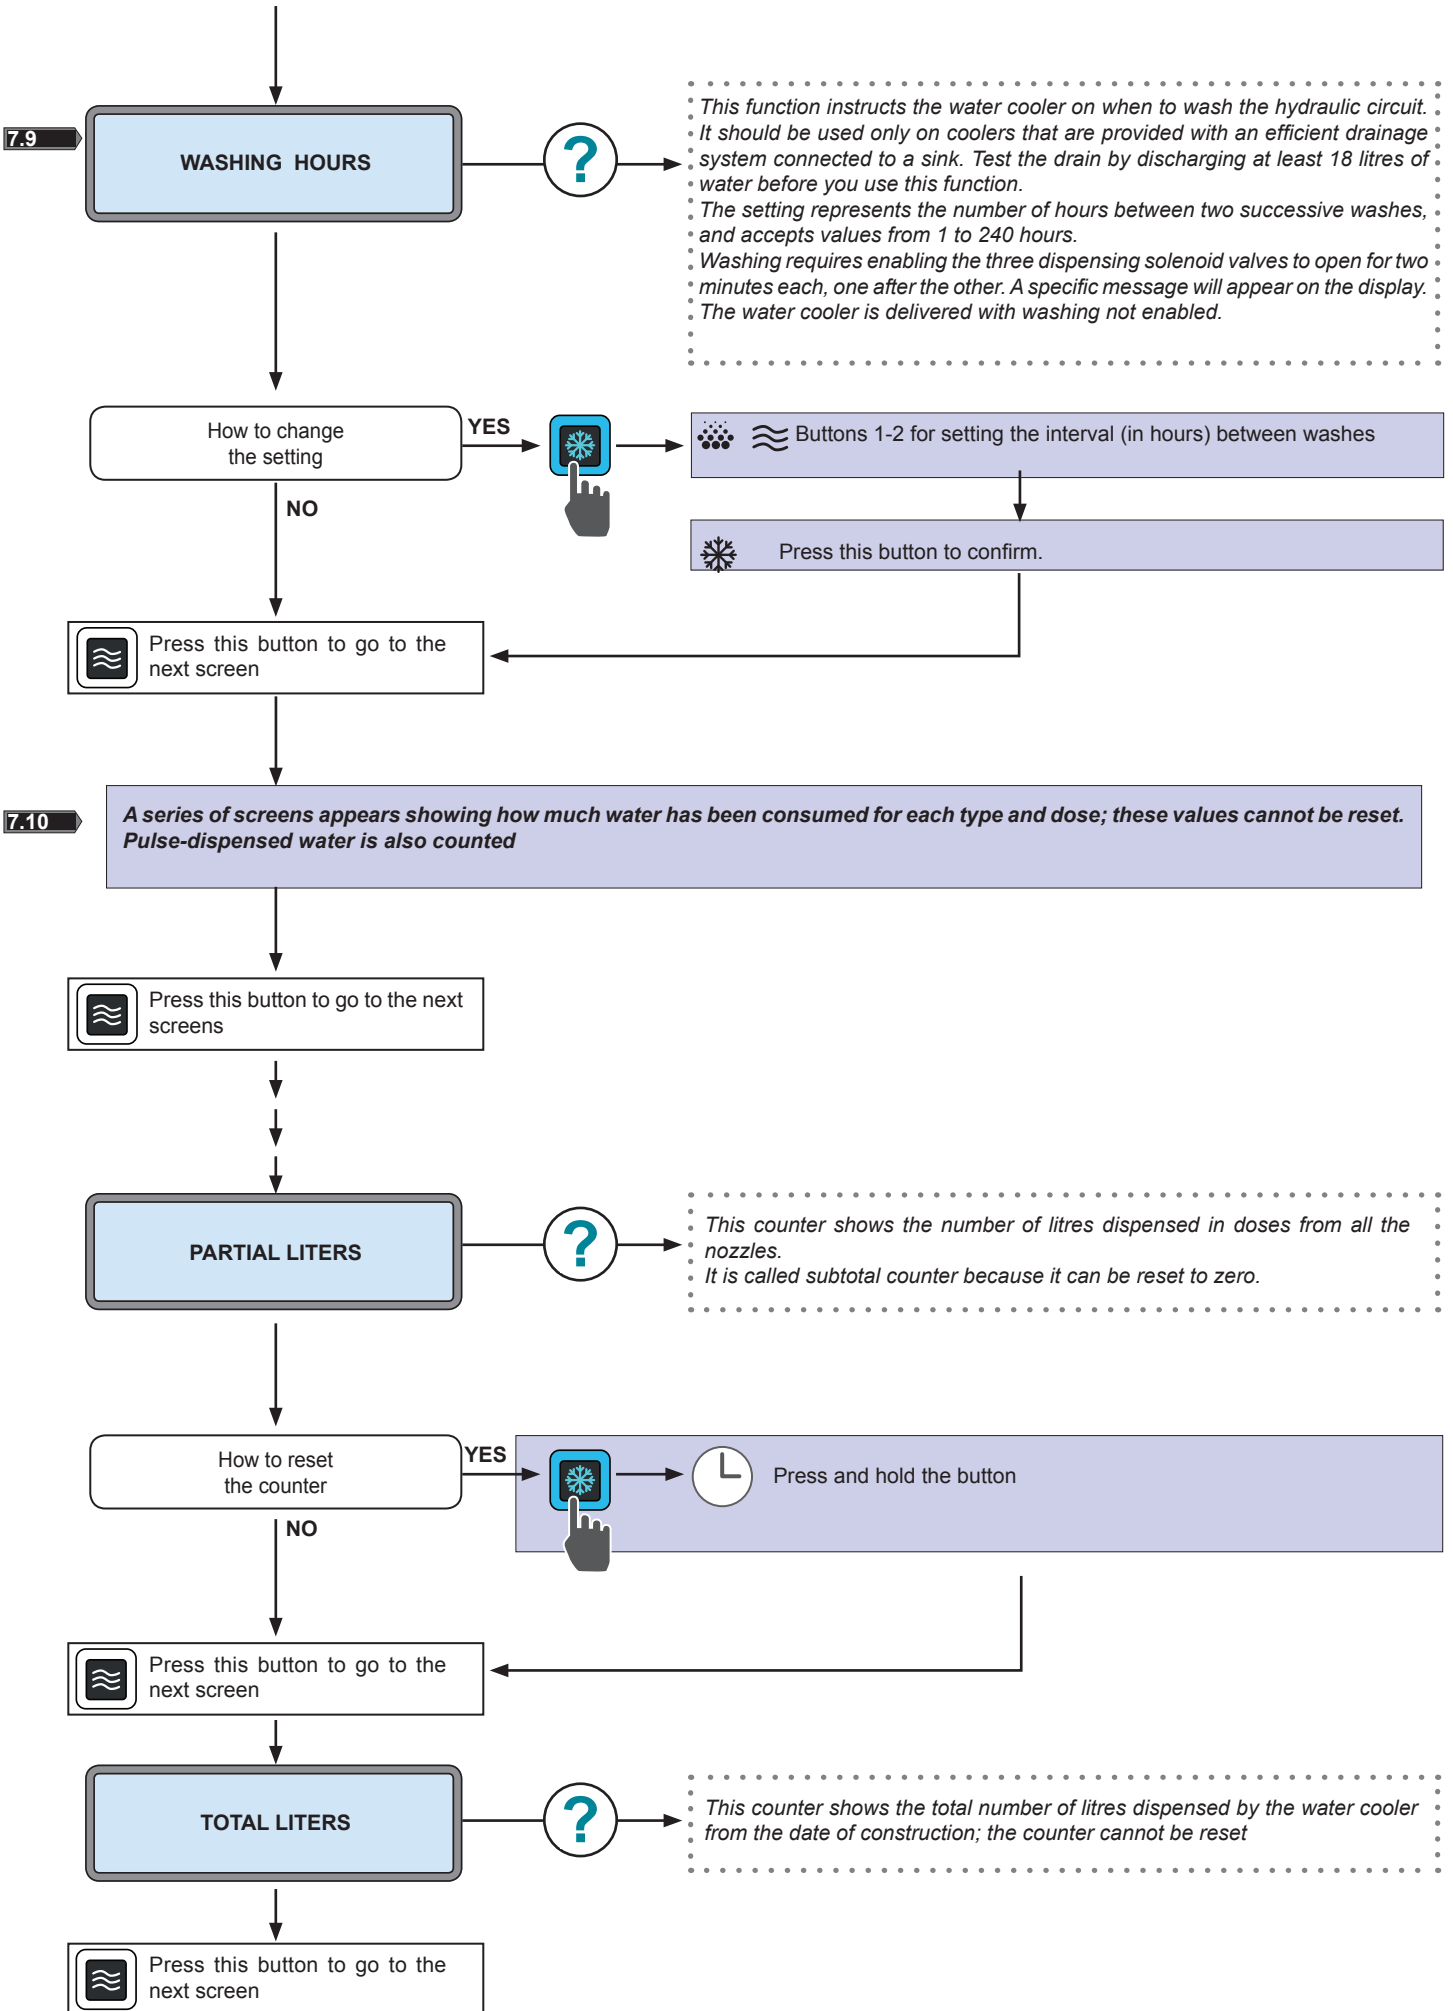


EN 1 ADVANCED PROGRAMMING

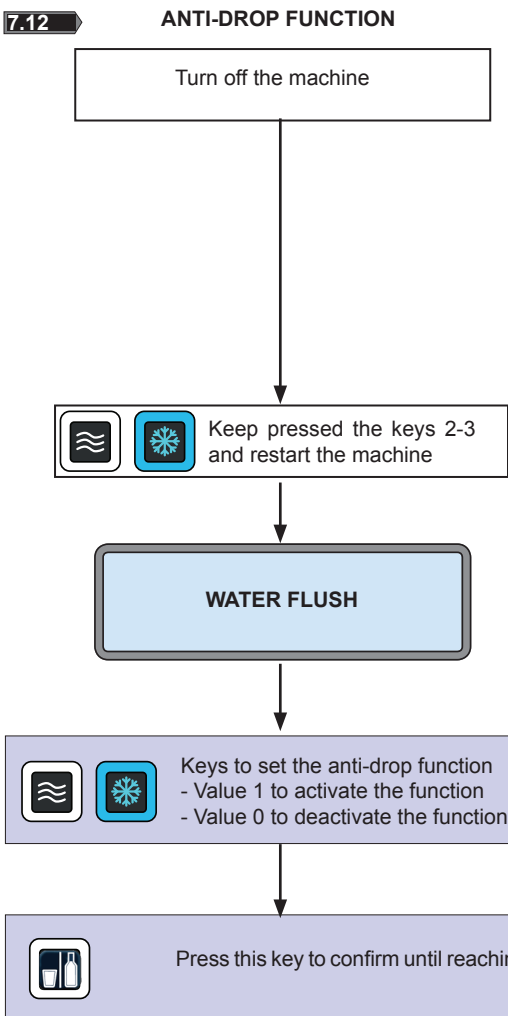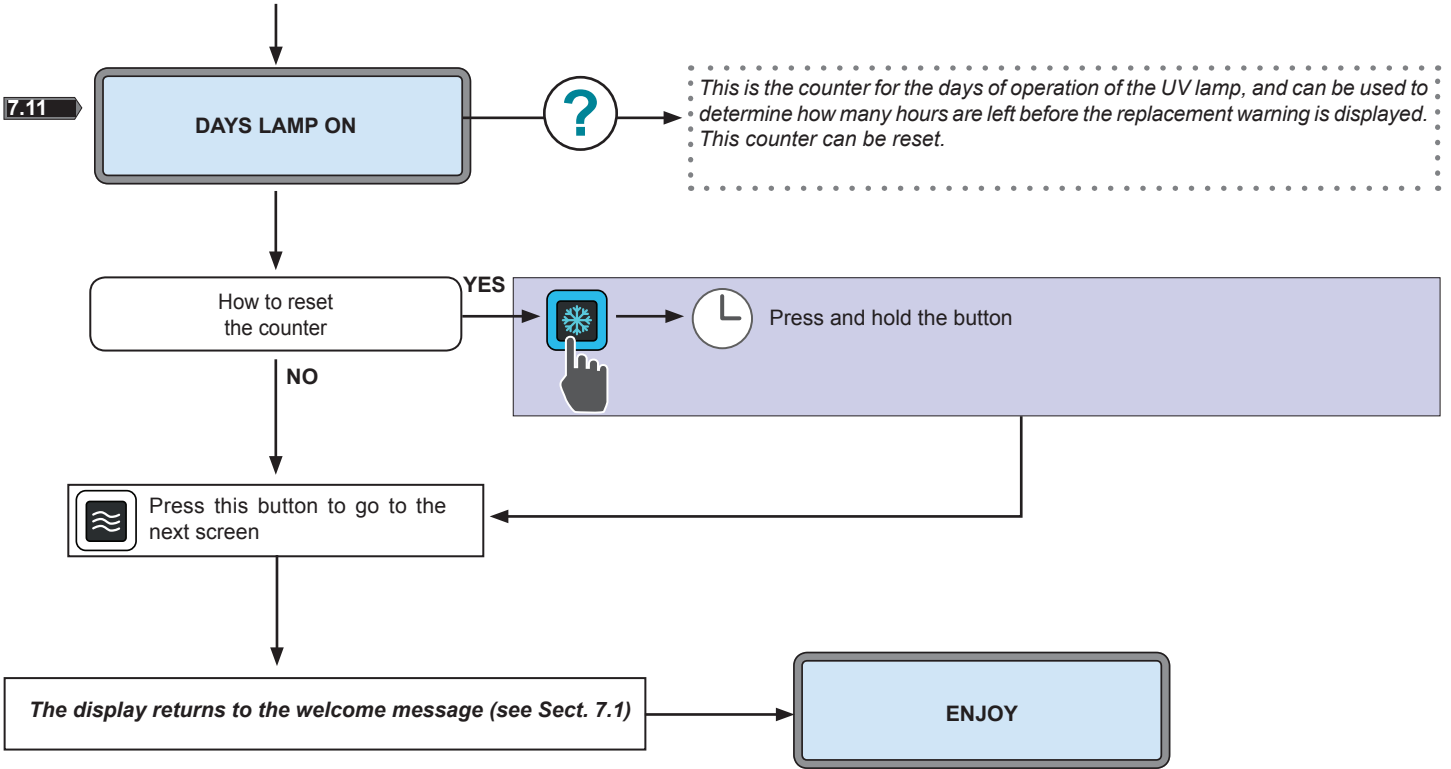

 **Warning!** The anti-drop function is not set by Default. To activate it, follow the next steps:

